

Config EIA by telephone set

(Note: telephone set must connect to the FXS interface of EIA)

Config method describe :

- 1、 Get dynamic IP address by DHCP :
offhook;
press “ *150*2# ”;
onhook;
if hint success, After 10 seconds, restart the EIA; (power-off then power-on)
done.
- 2、 Get IP address by specify fixed IP :
offhook; press “ *150*1# ”; onhook; then
 - (1) Config IP address :
Offhook; press “ *152*172*16*0*100# ”; onhook.
That means the IP address of EIA is 172.16.0.100.
 - (2) Config netmask :
Offhook; press “ *153*255*255*0*0# ”; onhook.
That means the netmask of eia is 255.255.0.0
 - (3) Config gateway IP address (next hop) :
Offhook; press “ *156*172*16*0*1# ”; onhook.
That means the gateway of LAN is 172.16.0.1
 - (4) if hint success, After 10 seconds, restart the EIA; (power-off then power-on)
- 3、 Query the IP address of EIA : offhook, press “ *158# ”
- 4、 If the EIA use PPPoE method to get IP address , it need to config by T1000 tool .

Note : the telephone will play voice hint “config sussess” if the setting step is correct.

Customize the FX0 voice hint on demand :

1. Offhook;
2. Press “ *199# ”
3. Then talk to the telephone set, for example “ Hello, this is ** company, please dial the extension telephone number”;
4. After 2 seconds or more, press # again to finish, you can record the voice hint for no more than 10 seconds.

5. You can check the voice effect: offhook; press “ *195# ”.